


USAGE INSTRUCTIONS

Item #CSI-10

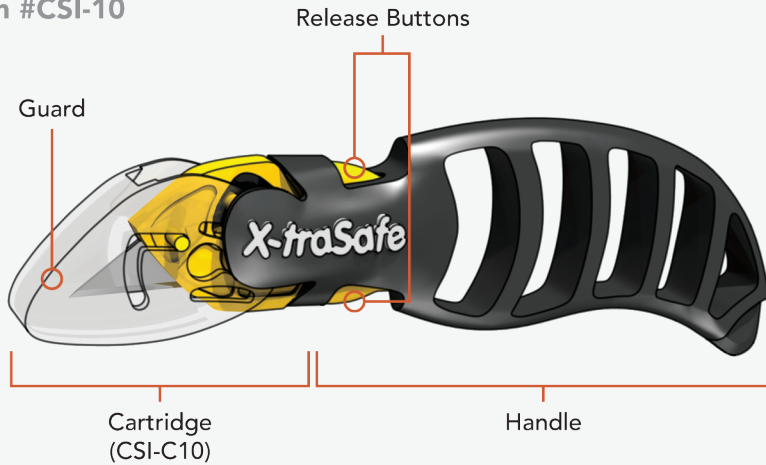


CAUTION: Use extreme care during insertion & removal of cartridge. Use extreme care when locking & unlocking the guard. Always cut away from your body and others.



Training video available on the Videos tab at spellboundinc.com/cartridgeknife

REMOVING & INSERTING CARTRIDGE

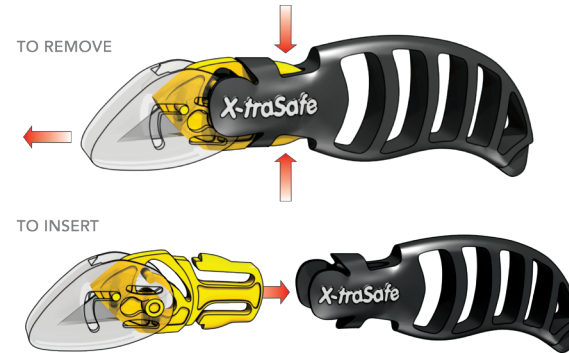


TO REMOVE

Lock guard before removing (see step 2). Squeeze two release buttons and pull cartridge out of the handle.

TO INSERT


Insert cartridge into handle until it clicks into place. Unlock guard before use (see step 2).

LOCKING & UNLOCKING GUARD

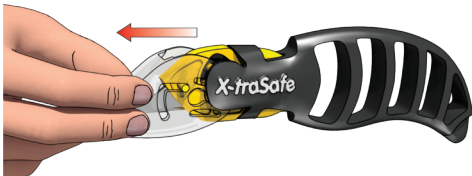

TO LOCK

Using caution, grab sides of guard and gently pull on guard as show above.

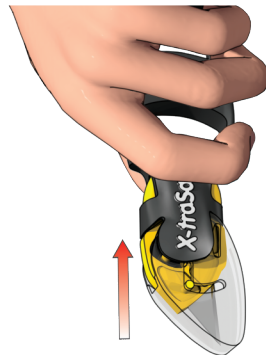

TO UNLOCK

Gently push guard against a flat surface.

TO USE



PRESS DOWN on cutting surface to expose blade and DRAG ALONG line of cut. Make sure guard is in the unlocked position.